



IMAGETEAM™ 3800, 3900, 4600, 4800, 5600, 5800, Hand Held Linear Imager

Programming Bar Codes - USB, Laptop, Suffix, Trigger Modes, Factory Default

**USB Terminal Interface**

Programs the imager to work as a USB Keyboard Device



~ 0 1 T E R M I D 1 2 4 .

**Keyboard Emulation for Laptops**

Programs the imager to work without an external keyboard.



~ 0 1 K B D S T Y 5 .

**TAB Suffix**

Programs the imager to add a TAB key function after each scan.



~ 0 1 S U F B K 2 9 9 0 9 .

**Carriage Return Suffix**

Programs the imager to add an Enter key function after each scan



~ 0 1 V S U F C R .

**Clear all Suffixes**

Removes all suffixes



~ 0 1 S U F C A 2 .

**Auto Trigger**

Hands free, scans continuously at full power.



~ 0 1 T R G M O D 1 .

**Presentation Mode**

Hands free, LEDs are off until a bar code is presented.



~ 0 1 T R G M O D 3 .

**Reread Delay = Medium**

Sets a delay before the imager can read the same bar code again. (Not available in IT46/4800)



~ 0 1 R R D D L Y 1 .

**Manual Trigger**

Must press the trigger to activate the imager.



~ 0 1 T R G M O D 0 .

**Factory Defaults**

Resets your imager to default settings.



~ 0 1 D E F A L T .

**Sample Code 39**



T E S T 1 2 3