



# IMAGETEAM™ 3800, 3900, 4600, 4800, 5600, 5800 Hand Held Linear Imagers

## Programming Bar Codes - Serial and OPOS Interface

### Serial Interface Programming

#### RS-232 Interface



~ 0 1 P A P 2 3 2 .

#### Baud Rate 9600



~ 0 1 2 3 2 B A D 5 .

#### Baud Rate 19200



~ 0 1 2 3 2 B A D 6 .

#### Baud Rate 38400



~ 0 1 2 3 2 B A D 7 .

#### Word Length

7 Data, 1 Stop, Parity Even



~ 0 1 2 3 2 W R D 3 .

#### Word Length

8 Data, 1 Stop, Parity None



~ 0 1 2 3 2 W R D 2 .

#### Handshaking

RTS/CTS On



~ 0 1 2 3 2 C T S 1 .

#### Handshaking

RTS/CTS Off



~ 0 1 2 3 2 C T S 0 .

#### STX Prefix and ETX Suffix



~ 0 1 P R E B K 2 9 9 0 2 ; S U F B K 2 9 9 0 3 .

#### Visual Menu



~ 0 1 0 1 V I S M N U .

---

### OPOS

#### Code ID and AIM ID Prefix



~ 0 1 P R E B K 2 9 9 5 C 8 0 5 C 8 1 .

#### Carriage Return Suffix



~ 0 1 V S U F C R .

---

### Factory Defaults

Resets your imager to default settings.



~ 0 1 D E F A L T .

#### Sample UPC Code



0 84915 00358 5